

COMFORT BILT® builds to your specifications.
Before ordering, choose your installation method.




Blind Stop Installation (Inside Mount)

Blind stop installation involves mounting your storm window inside of your brick mold frame (refer to figure 1). When choosing blind stop installation you will want to ensure you have measured your window opening in several locations taking the narrowest opening as your guide.

Remember, COMFORT BILT® will build to your specifications so you will want to downsize your opening approximately 1/8" to allow for clearance.

FIGURE 1

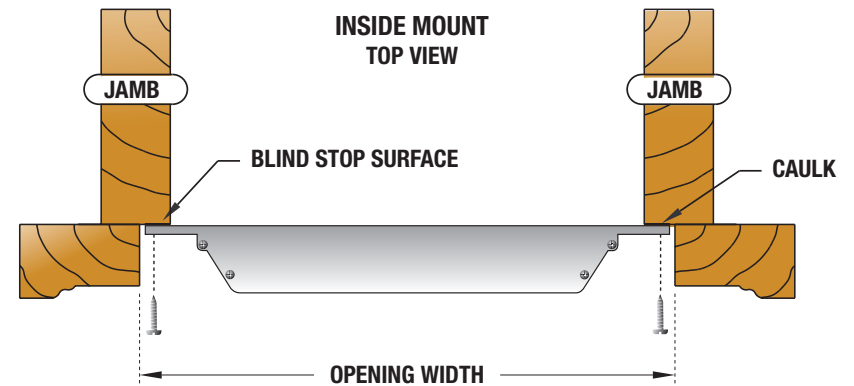

Overlap Installation (Outside Mount)

Overlap installation involves mounting your storm window on the outside of your brick mold frame (refer to figure 2). When choosing overlap installation make sure your measurements have allowed for the window flange to overlap the frame. We recommend allowing approximately 1/2" on each side and 3/4" in height for the flange to overlap the brick mold.

Remember, COMFORT BILT® will build to your specifications. You may wish to take several measurements side to side and top to bottom to allow for variations in the framework.

FIGURE 2

